

SINGLE SPHERE EXPANSION JOINTS

PART #	DESCRIPTION
EJSS-112	SINGLE SPHERE EXPANSION JOINT
EJSS-2	SINGLE SPHERE EXPANSION JOINT
EJSS-212	SINGLE SPHERE EXPANSION JOINT
EJSS-3	SINGLE SPHERE EXPANSION JOINT
EJSS-4	SINGLE SPHERE EXPANSION JOINT
EJSS-5	SINGLE SPHERE EXPANSION JOINT
EJSS-6	SINGLE SPHERE EXPANSION JOINT
EJSS-8	SINGLE SPHERE EXPANSION JOINT
EJSS-10	SINGLE SPHERE EXPANSION JOINT
EJSS-12	SINGLE SPHERE EXPANSION JOINT
EJSS-14	SINGLE SPHERE EXPANSION JOINT
EJSS-16	SINGLE SPHERE EXPANSION JOINT
EJSS-18	SINGLE SPHERE EXPANSION JOINT
EJSS-20	SINGLE SPHERE EXPANSION JOINT
EJSS-24	SINGLE SPHERE EXPANSION JOINT

TWIN SPHERE EXPANSION JOINTS

EJTS-112	TWIN SPHERE EXPANSION JOINT
EJTS-2	TWIN SPHERE EXPANSION JOINT
EJTS-212	TWIN SPHERE EXPANSION JOINT
EJTS-3	TWIN SPHERE EXPANSION JOINT
EJTS-4	TWIN SPHERE EXPANSION JOINT
EJTS-5	TWIN SPHERE EXPANSION JOINT
EJTS-6	TWIN SPHERE EXPANSION JOINT
EJTS-8	TWIN SPHERE EXPANSION JOINT
EJTS-10	TWIN SPHERE EXPANSION JOINT
EJTS-12	TWIN SPHERE EXPANSION JOINT
EJTS-14	TWIN SPHERE EXPANSION JOINT
EJTS-16	TWIN SPHERE EXPANSION JOINT
EJTS-18	TWIN SPHERE EXPANSION JOINT
EJTS-20	TWIN SPHERE EXPANSION JOINT

TWIN SPHERE UNION EXPANSION JOINTS

EJTU-12	TWIN SPHERE UNION EXPANSION JOINT
EJTU-34	TWIN SPHERE UNION EXPANSION JOINT
EJTU-1	TWIN SPHERE UNION EXPANSION JOINT
EJTU-114	TWIN SPHERE UNION EXPANSION JOINT
EJTU-112	TWIN SPHERE UNION EXPANSION JOINT
EJTU-2	TWIN SPHERE UNION EXPANSION JOINT

SINGLE SPHERE EXPANSION JOINT CONTROL RODS

CRUS-112	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-2	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-212	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-3	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-4	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-5	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-6	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-8	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-10	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-12	SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-14	SINGLE SPHERE EXPAN. JOINT CONTROL ROD

CRUS-16 SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-18 SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-20 SINGLE SPHERE EXPAN. JOINT CONTROL ROD
CRUS-24 SINGLE SPHERE EXPAN. JOINT CONTROL ROD

TWIN SPHERE EXPANSION JOINT CONTROL RODS

CRUT-112 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-2 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-212 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-3 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-4 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-5 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-6 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-8 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-10 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-12 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-14 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-16 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-18 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD
CRUT-20 DOUBLE SPHERE EXPAN. JOINT CONTROL ROD

