



# PH SENSOR CALIBRATION




Conect Controller



Conect Sensor




Unsrew protection cover

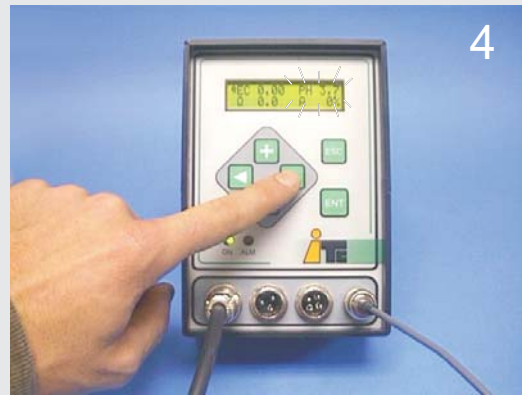

Press Enter Twice




Press Enter **ENT**

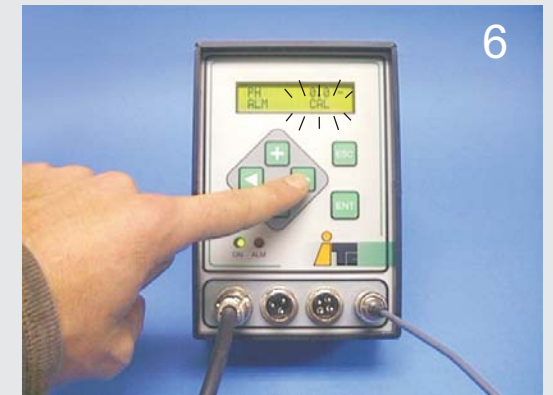


Press enter three times



Press Enter **ENT**

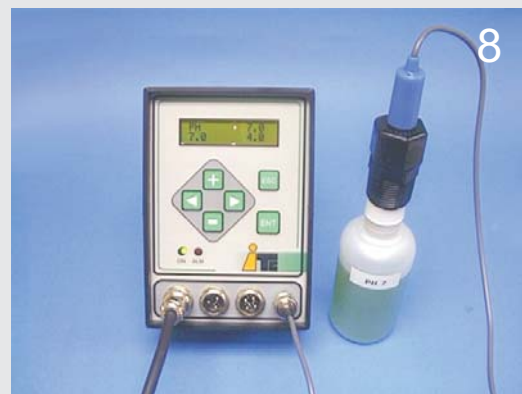

Put sensor into ph 7.0 green buffer liquid and wait ( aprox-1 min. ).

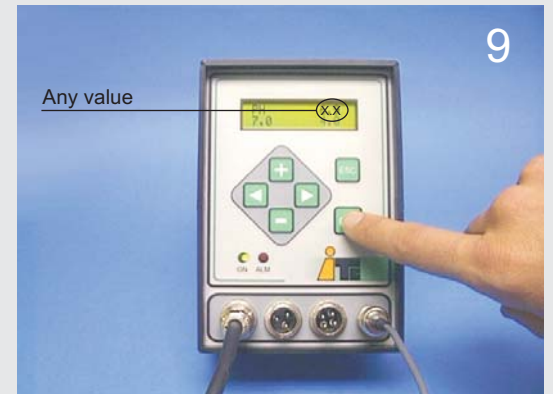


Press Enter **ENT**




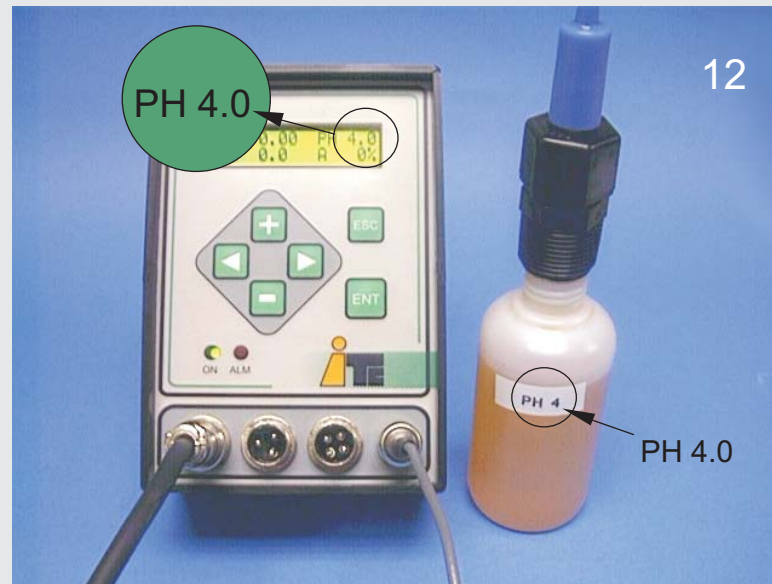
# PH SENSOR CALIBRATION




 Clean sensor with water and put into 4.0 orange buffer and wait for reading to stabilise.



Press  The sensor is now calibrated.



Check correct calibration with sensor inside buffer of ph 4.0.

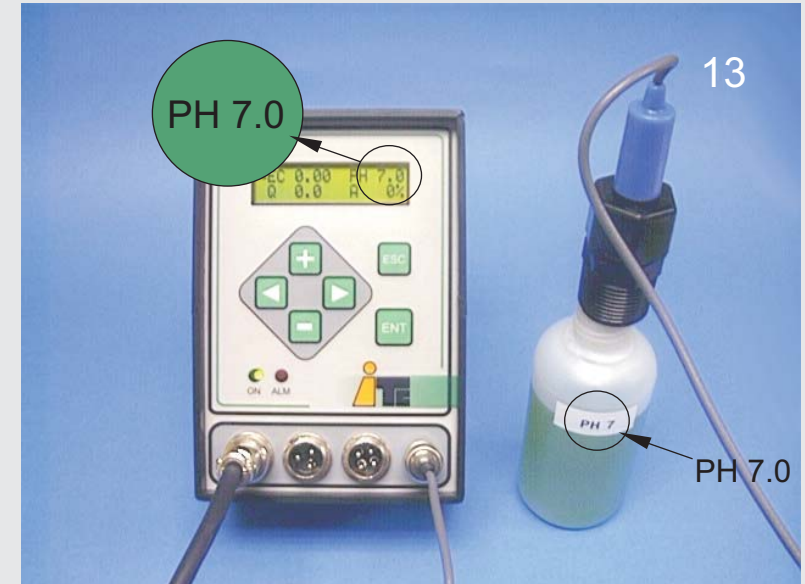

Clean sensor with water and check correct calibration with sensor insidel ph 7.0.